

How to Upgrade HTS 580 Series

Connect the upgrade cable to the computer, and the other side of the cable connects to the communication side of the total station. Press the power key and 1 key of the total station, when power on it will get into upgrade mode. Open the upgrading program, after you see the upgrade interface, use mouse to click PROGRAMME, at this time the total station start to upgrade. After upgrading the program, the total station will power off automatically. Plug off the cable, finished.

How to upgrade H9 Series Total Station

Steps:

1. Store the software in SD card, U-disk, or memory of the total station.
2. Power ON ,-----click set -----click B-----click upgrade ----select system
--select the software in SD card or U disk or memory-----
3. Click start then wait until the upgrading finished!